

B601/B603/B606/B607/B610/B611/
B612/B613/B614/B615/B116/B117/
B118/B119/B120/B121

Ax1



Back

Gx4



M8x55MM

Screw

Bx2



Front legs


Hx4



M8x65MM

Screw

 Cx2



Back legs


Ix8



Ø4x45MM

self-tapping screw

 Dx1




Front rung

Jx8



Flat washer

 Ex2



Side rails

Kx8



Spring washer

Fx1



Back rail


Lx1



M6


Allen key

1

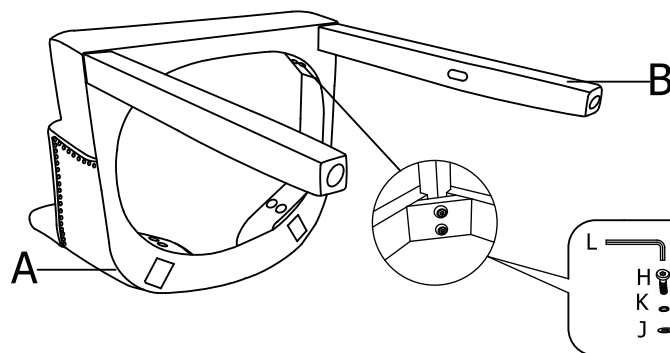


Put the screws in the holes, tighten the screws, but not too tight, 90% is ok.

2

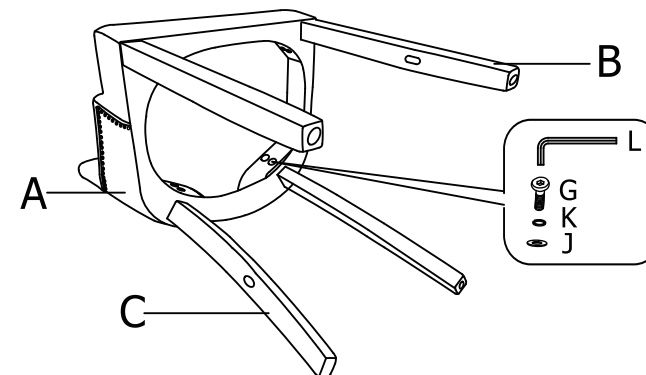


Put the screws in the holes, tighten the screws, but not too tight, 90% is ok.

3

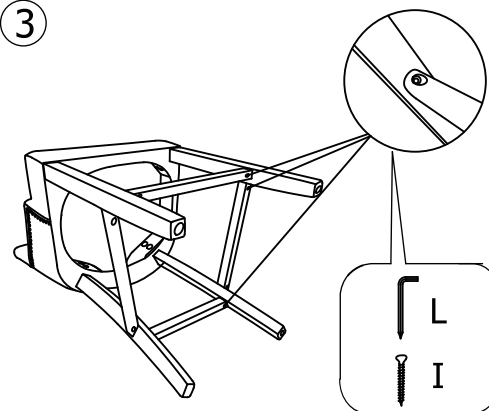


Then adjust balance of this chair, tighten all the screws to 100%.

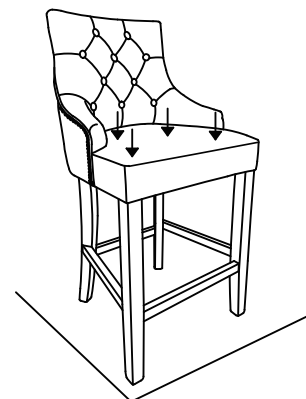

Then adjust balance of this chair, tight all the screws to 100%.

4

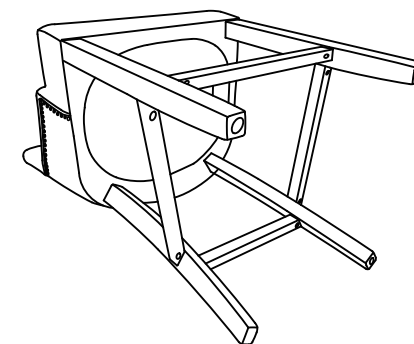

Finally , stick the non-woven cover underneath the seat

WARNING:

DO NOT STAND ON THE CHAIR, DO NOT USE THIS CHAIR AS A STEP LADDER.

USE THIS PRODUCT ONLY FOR SITTING ONE PERSON AT A TIME.

DO NOT USE THIS CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE FIRMLY SECURED.

AT LEAST EVERY 4 MONTHS, CHECK ALL BOLTS, SCREWS AND KNOBS TO BE SURE THEY ARE TIGHT.

IF PARTS ARE MISSING, BROKE, DAMAGED OR WORN, STOP USING THIS PRODUCT UNTIL YOU HAVE REPAIRED IT FULLY. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

PLEASE DO NOT USE KNIFE TO OPEN ANY PARTS OF THE BOX OR CHAIR.

CLEANING OF PU/LEATHER COVER - WIPE CLEAN WITH A SOFT CLOTH MOISTENED WITH WATER AND NEUTRAL DETERGENT. DO NOT USE BLEACH,CHEMICAL OR BIOLOGICAL CLEANERS.