

D101/D102/D103/D104/D105/D106/D107/D108/  
D109/D110/D111/D112/D113/D114/D115/D116/  
D117/D118/D119/D120/D121

## CHAIR LEGS CAN BE FOUND ZIPPED UNDERNEATH THE SEAT

Ax1



Seat


Ex4



M8x65MM


Screw

①

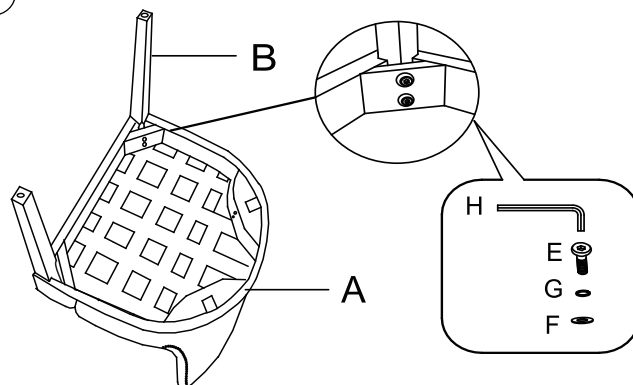


Turn seat base/ pad upside down and remove chair legs.  
Put the screws in the holes, tighten the screws,  
but not too tight, 90% is ok.

②

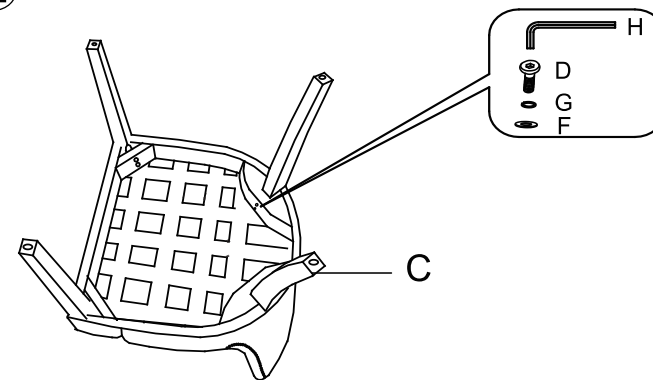

Put the screws in the holes, tighten the screws,  
but not too tight, 90% is ok.

 Bx2



Front Legs

Fx8



Flat washer

Cx2



Back Legs

Gx8



Spring washer

Dx4



M8x55MM

Screw


Hx1



M8


Allen key

③

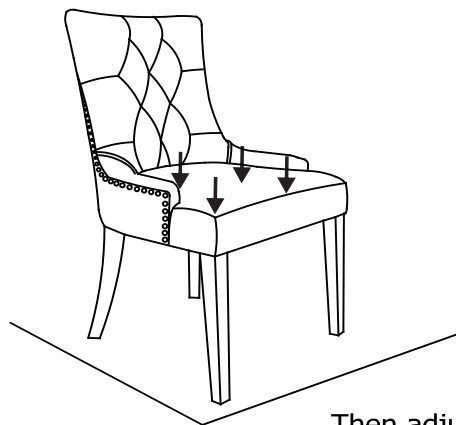

Then adjust balance of the chair,  
tight all the screws to 100%.

④

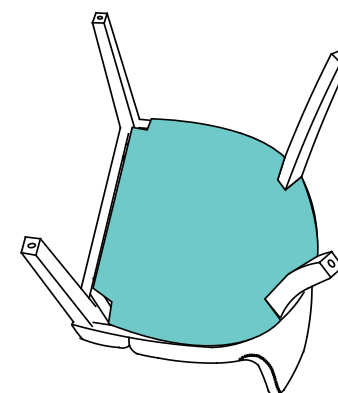

Stick the black part on the seat.

### WARNING:

DO NOT STAND ON THE CHAIR, DO NOT USE THIS CHAIR AS A STEP LADDER.

USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME.

DO NOT USE THIS CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE FIRMLY SECURED.

AT LEAST EVERY 4 MONTHS, CHECK ALL BOLTS, SCREWS AND KNOBS TO BE SURE THEY ARE TIGHT.

IF PARTS ARE MISSING, BROKE, DAMAGED OR WORN, STOP USING THIS PRODUCT UNTIL YOU HAVE REPAIRED IT FULLY.

FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

PLEASE DO NOT USE KNIFE TO OPEN ANY PARTS OF THE BOX OR CHAIR.

CLEANING OF PU/LEATHER COVER - WIPE CLEAN WITH A SOFT CLOTH MOISTENED WITH WATER AND NEUTRAL DETERGENT.

DO NOT USE BLEACH, CHEMICAL OR BIOLOGICAL CLEANERS.