

D-301/D-302/D-303

Ax1



Back

Fx4



M8x80MM

Screw

Bx1



Seat

Gx10



Flat washer

Cx2



Fornt legs

Hx10



Spring washer

Dx2



M8x55MM

Screw

Ix1



M8

Allen key


Ex4



M8x65MM


Screw

①

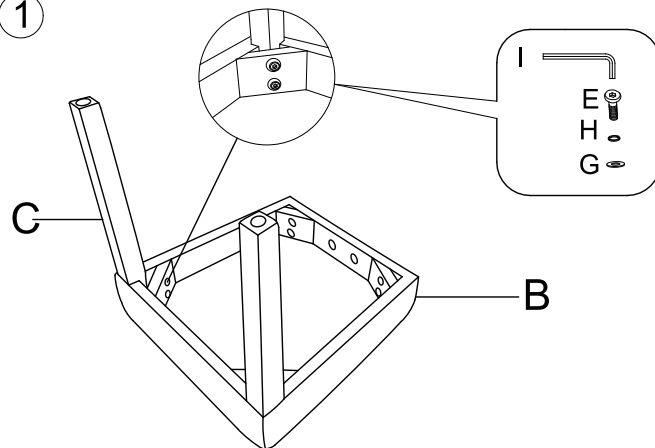


Put the screws in the holes, tighten the screws, but not too tight, 90% is ok.

②

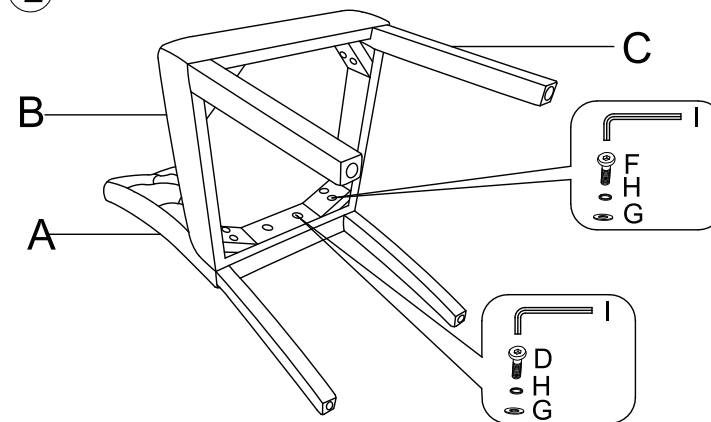


Put the screws in the holes, tighten the screws, but not too tight, 90% is ok.

③

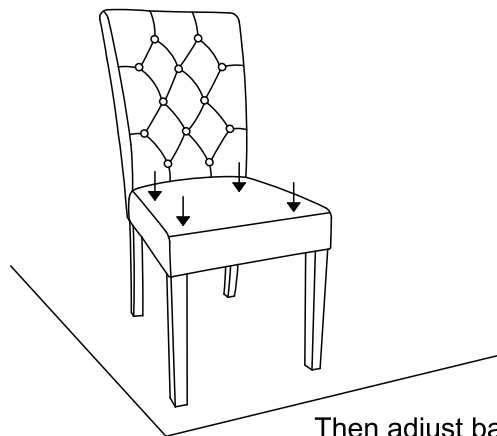

Then adjust balance of this chair, tighten all the screws to 100%.

④

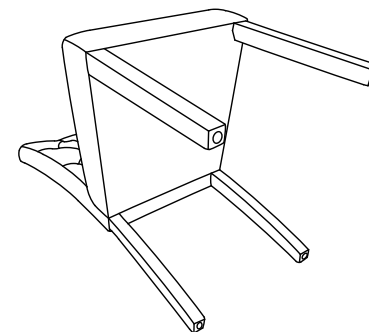

Finally , stick the non-woven cover underneath the seat.

WARNING:

DO NOT STAND ON THE CHAIR, DO NOT USE THIS CHAIR AS A STEP LADDER.

USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME.

DO NOT USE THIS CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE FIRMLY SECURED.

AT LEAST EVERY 4 MONTHS, CHECK ALL BOLTS, SCREWS AND KNOBS TO BE SURE THEY ARE TIGHT.

IF PARTS ARE MISSING, BROKE, DAMAGED OR WORN, STOP USING THIS PRODUCT UNTIL YOU HAVE REPAIRED IT FULLY. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

PLEASE DO NOT USE KNIFE TO OPEN ANY PARTS OF THE BOX OR CHAIR.

CLEANING OF PU/LEATHER COVER - WIPE CLEAN WITH A SOFT CLOTH MOISTENED WITH WATER AND NEUTRAL DETERGENT. DO NOT USE BLEACH,CHEMICAL OR BIOLOGICAL CLEANERS.