


D-501/D-502/D-503/D-504  
D-505/D-506/D-507

Ax1

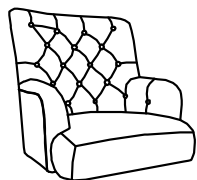

Seat


Ex2



Ø4x40MM

Screw

Bx2

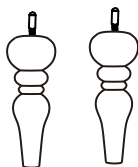

Front legs


Fx1



M6


Allen key

 Cx2



Back legs


Dx4

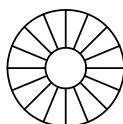

Plastic washer


## CHAIR LEGS CAN BE FOUND ZIPPED UNDERNEATH THE SEAT

①

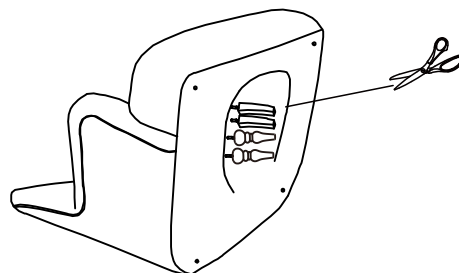


The chair legs are inside the zip pocket under the seat.

②

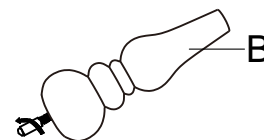


Before installing the legs, please take off the plastic cap.

③

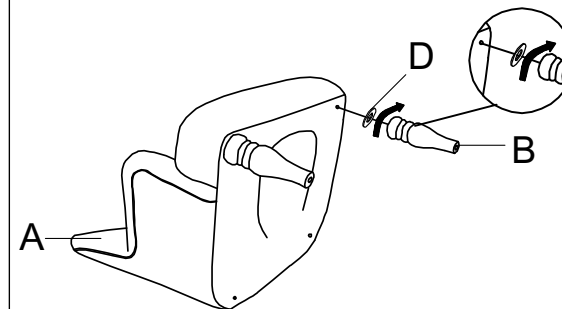


Insert the front legs into designated holes by turning clockwise until it is secured.

④

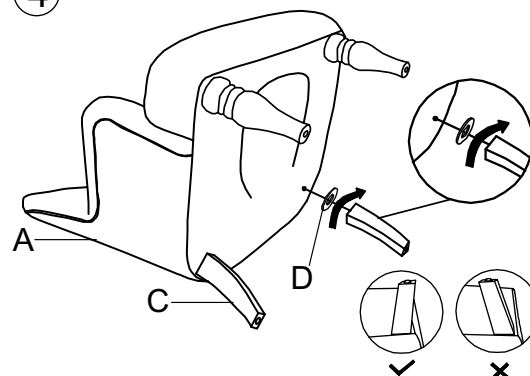


Insert the back legs into designated holes by turning clockwise until it is secured.

⑤

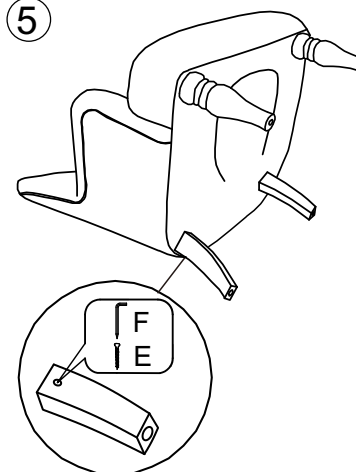

⑥

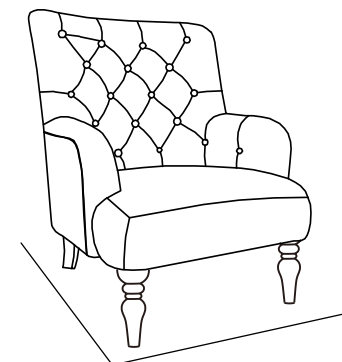

Your chair is ready!

### WARNING:

DO NOT STAND ON THE CHAIR, DO NOT USE THIS CHAIR AS A STEP LADDER.

USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME.

DO NOT USE THIS CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE FIRMLY SECURED.

AT LEAST EVERY 4 MONTHS, CHECK ALL BOLTS, SCREWS AND KNOBS TO BE SURE THEY ARE TIGHT.

IF PARTS ARE MISSING, BROKE, DAMAGED OR WORN, STOP USING THIS PRODUCT UNTIL YOU HAVE REPAIRED IT FULLY.

FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

PLEASE DO NOT USE KNIFE TO OPEN ANY PARTS OF THE BOX OR CHAIR.

CLEANING OF PU/LEATHER COVER - WIPE CLEAN WITH A SOFT CLOTH MOISTENED WITH WATER AND NEUTRAL DETERGENT.

DO NOT USE BLEACH, CHEMICAL OR BIOLOGICAL CLEANERS.