



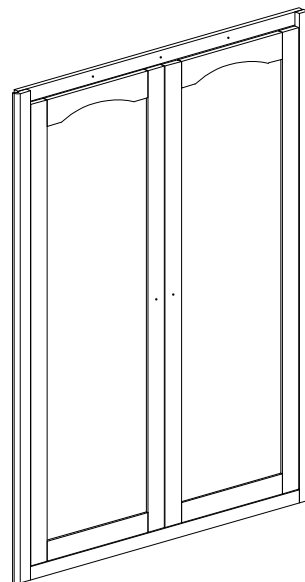



No	List of Hardware	Q.Ty (pcs)
1	Bolt M6 x 35 	10
2	Flat Washers 	10
3	Allen key K4 	1
4	Screw Ø4 x 30 	10
5	Screw Ø4 x 35 	20
6	Screw Ø4 x 25 	4
7	Screw Ø4 x 15 	6
8	Handle with bolt 	2 set
9	Bracket 	2
10	Tie 	1
11	Dowel 10 x 30 	1

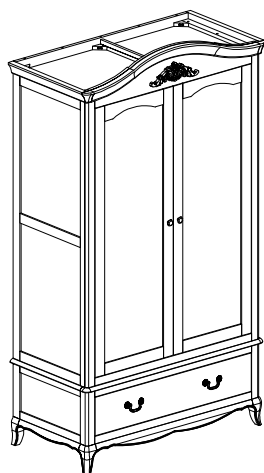


Ax1
FRONT FRAME WITH DOOR

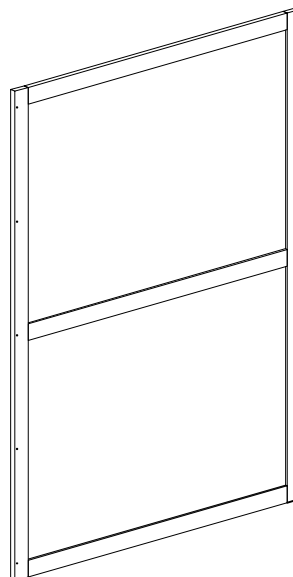


Dx1- BACK FRAME

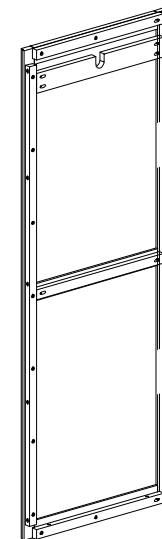

Bx1- LEFT SIDE

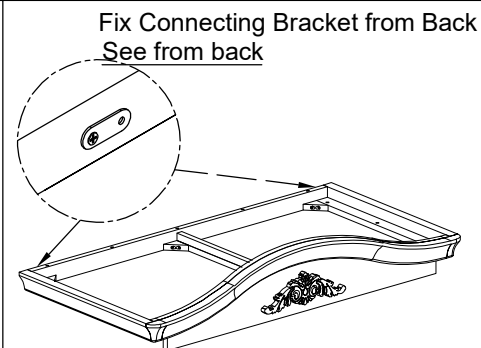


Ex1 - TOP FRAME

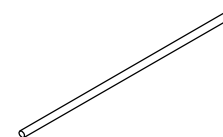


Fx1 - HANGING RAIL

The dowel hole location
on the right side only


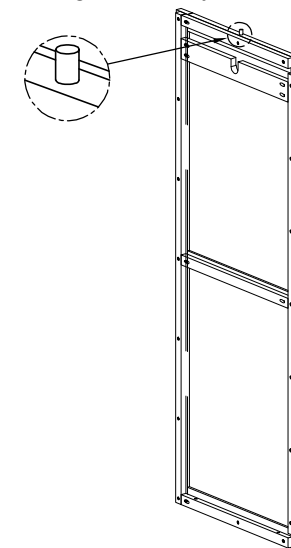


Cx1 - RIGHT SIDE


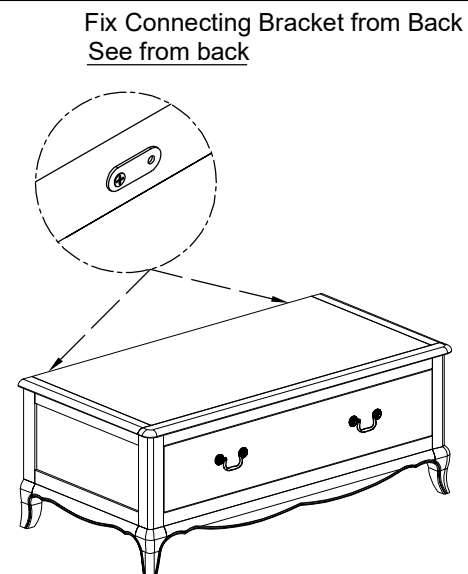


Gx1 - BASE


STEP 1

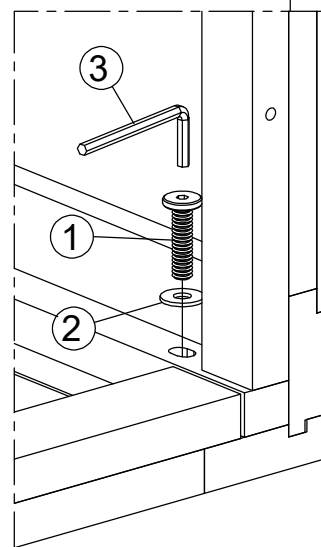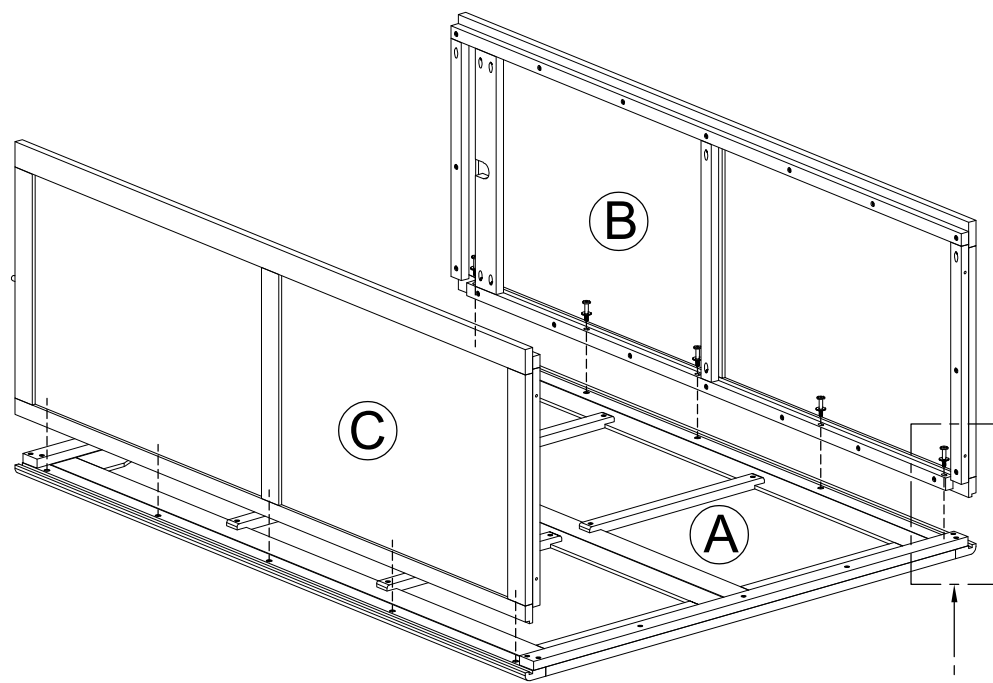


STEP 2

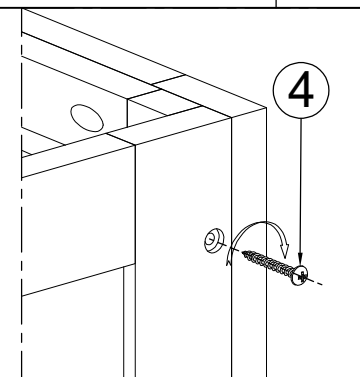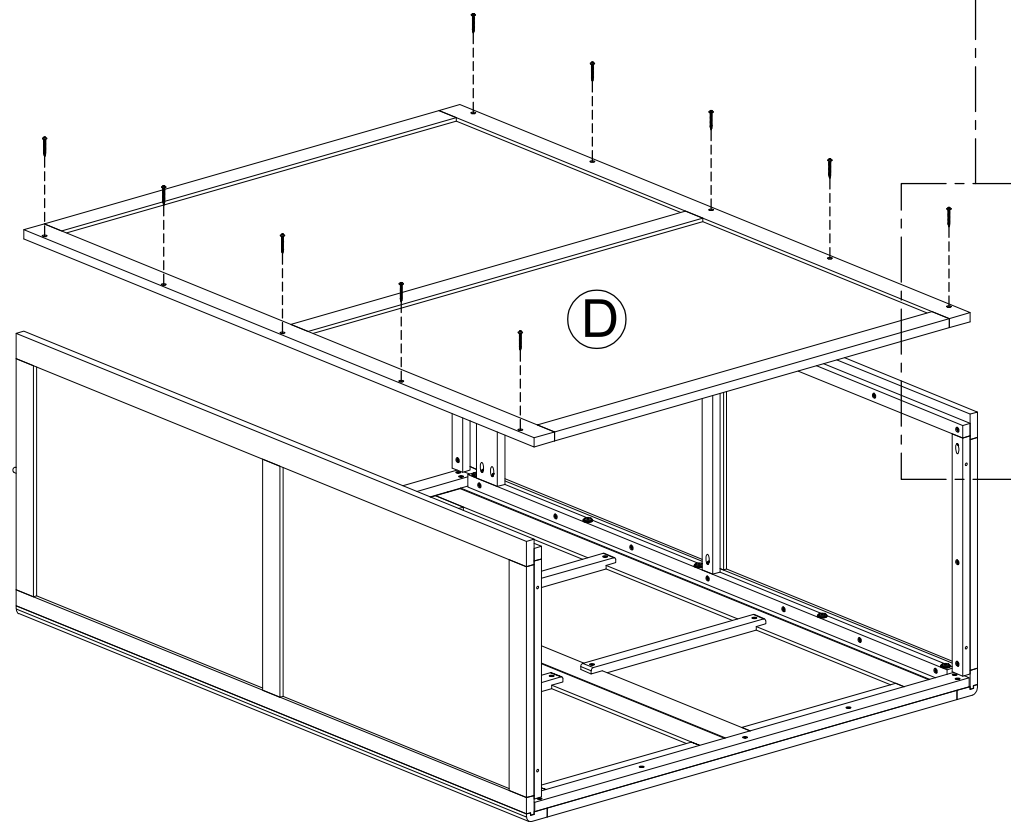


STEP 3

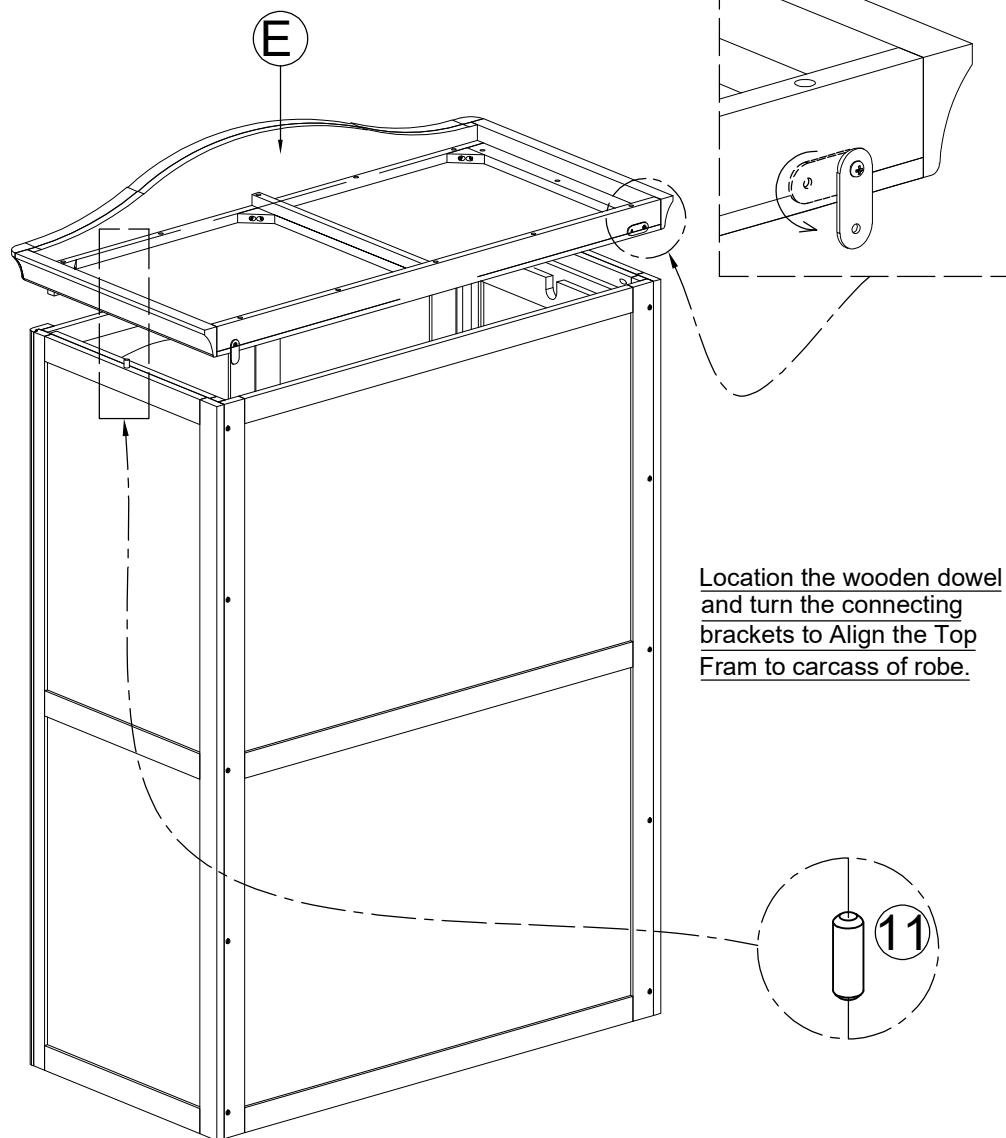


STEP 4

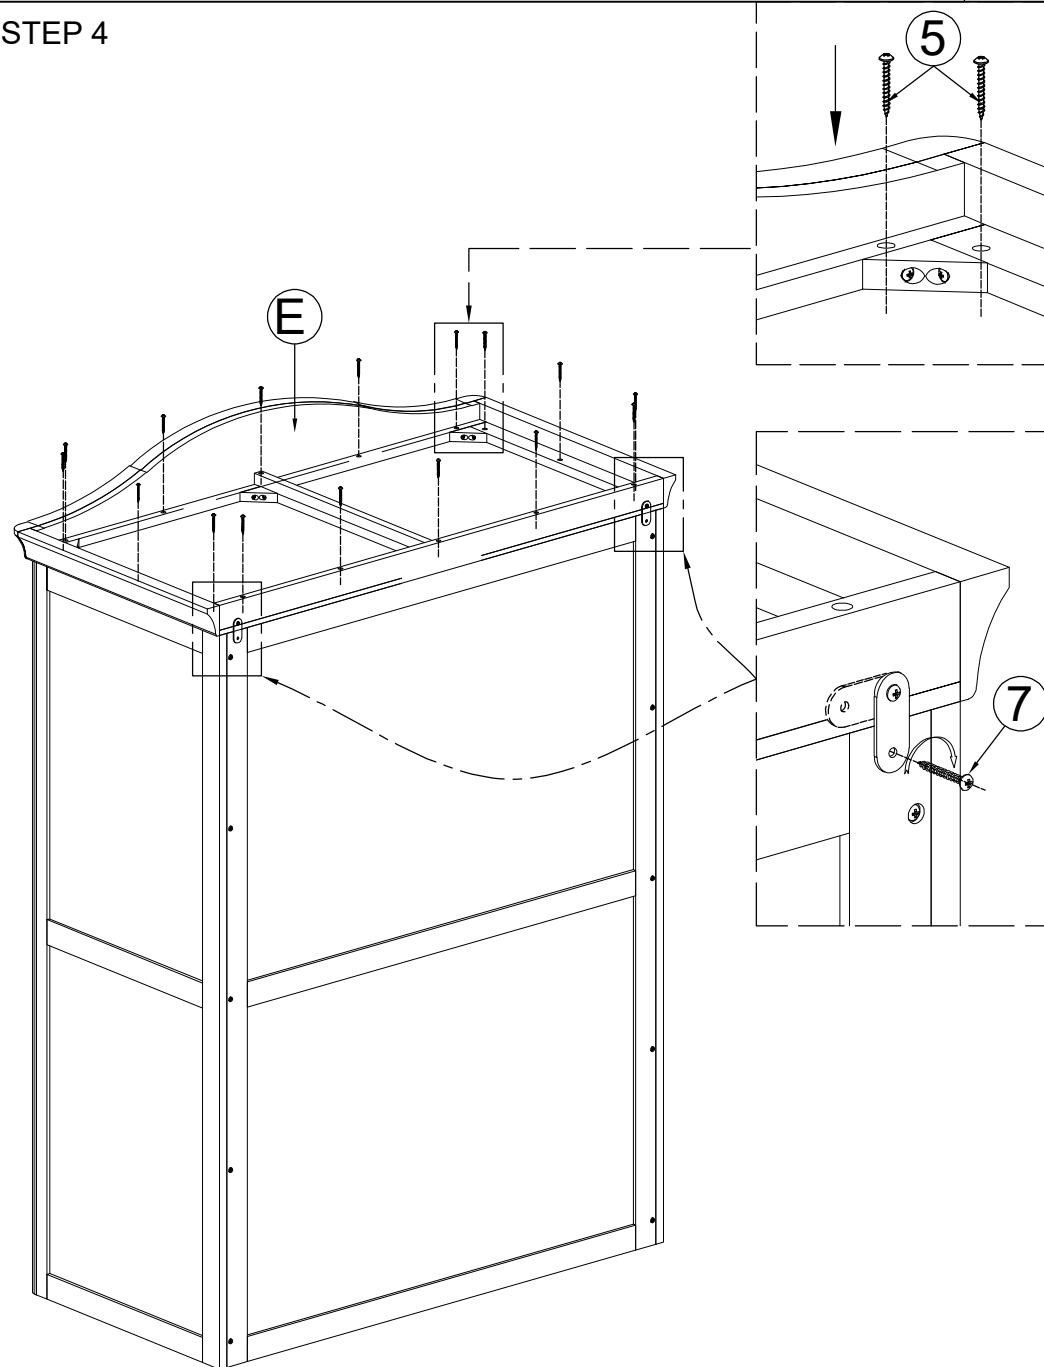


STEP 5

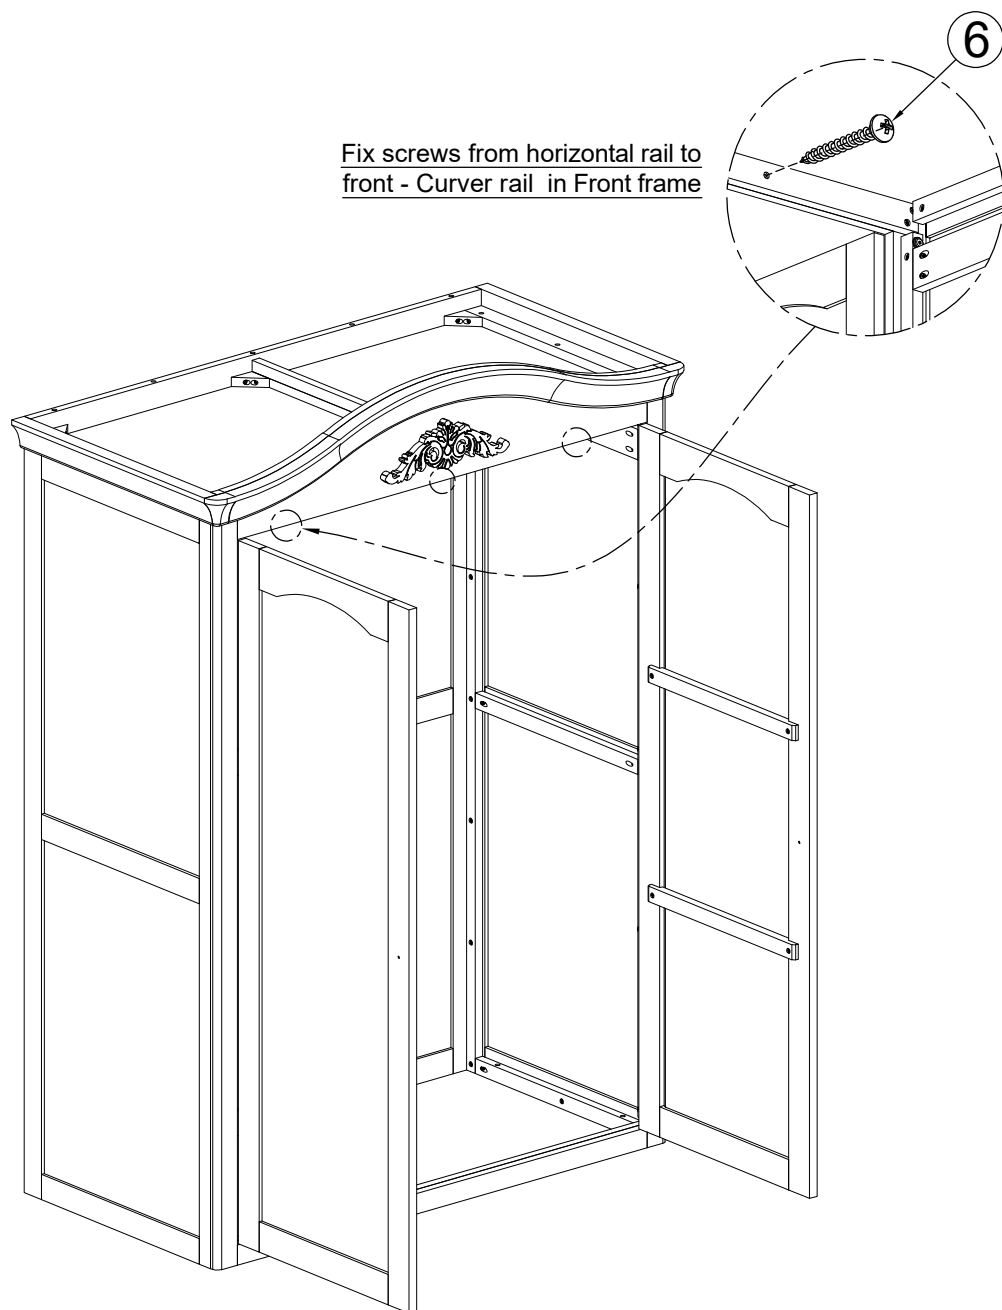





STEP 6

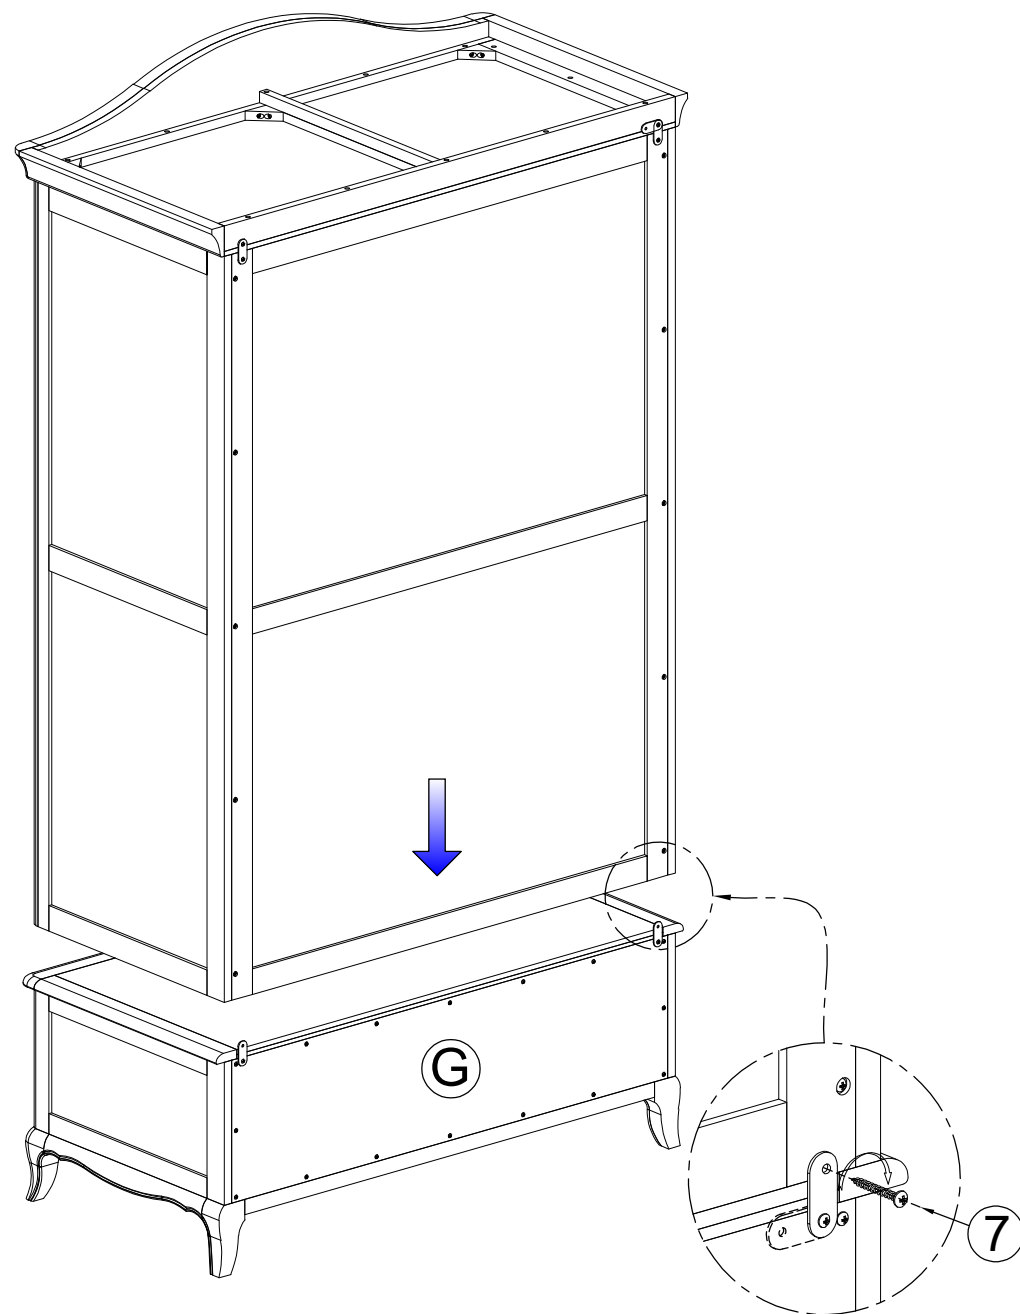

STEP 7

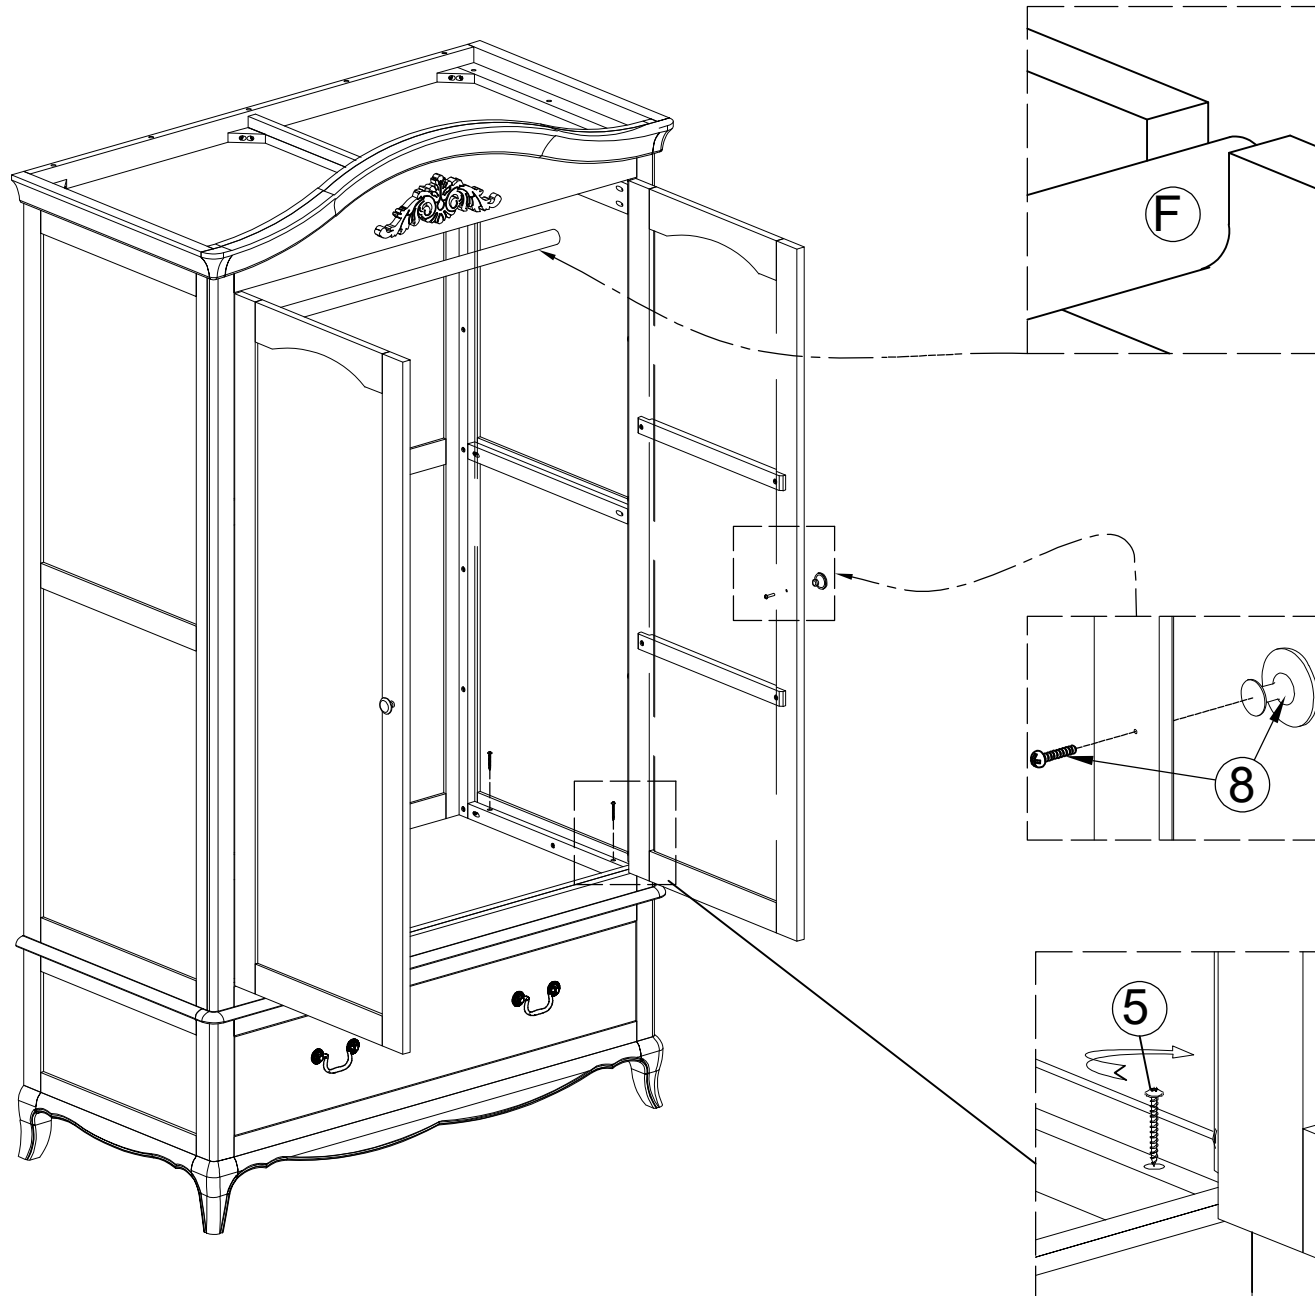

STEP 8

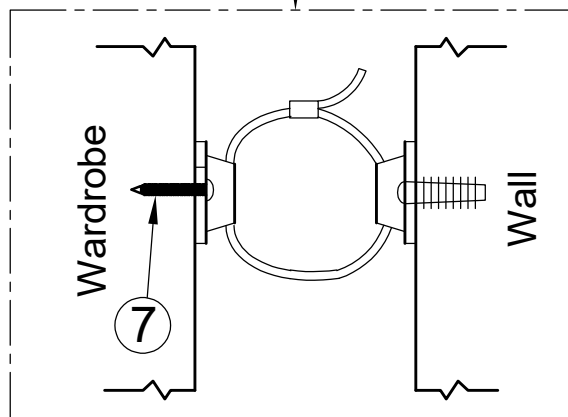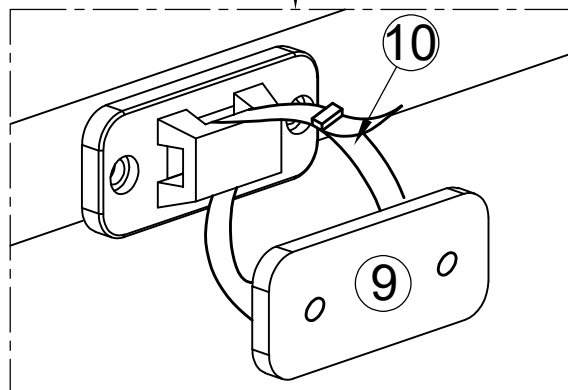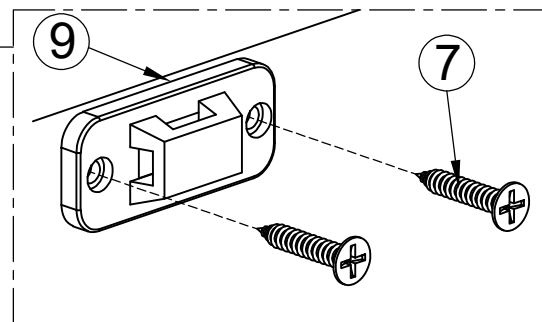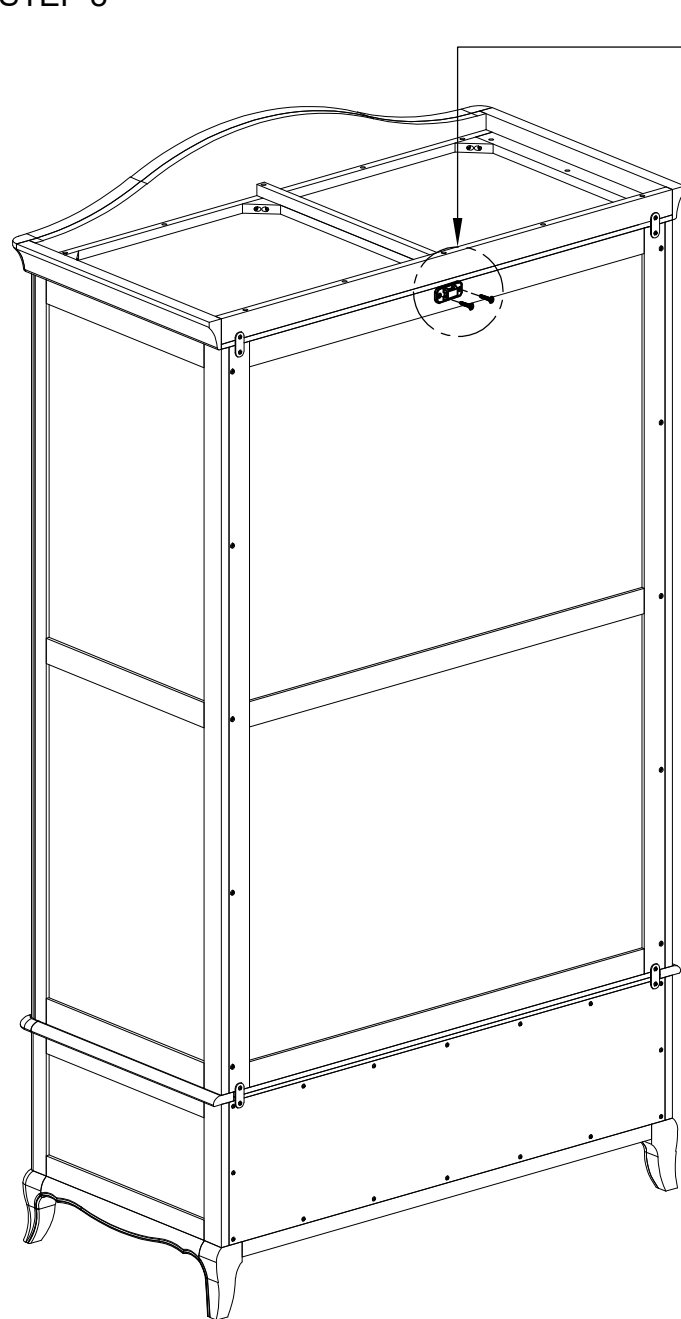

FINAL

