






No	List of Hardware	Q.Ty (pcs)
1	Bolt M6 x 35 	10
2	Flat Washers 	10
3	Allen key K4 	1
4	Screw Ø4 x 30 	10
5	Screw Ø4 x 35 	20
6	Screw Ø4 x 25 	3
7	Screw Ø4 x 15 	14
8	Handle with bolt 	3 set
9	Bracket 	4
10	Tie 	2
11	Dowel 10 x 30 	1

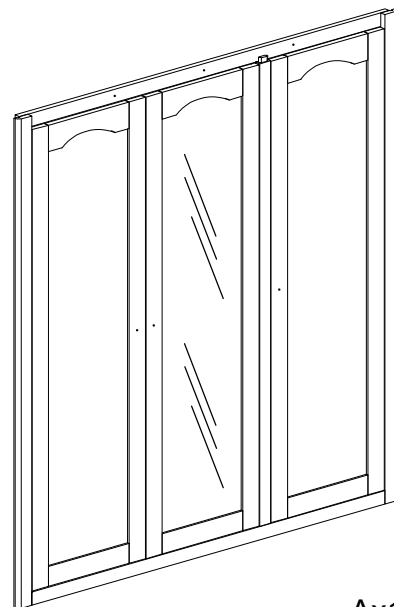


Ax1
FRONT FRAME WITH DOOR


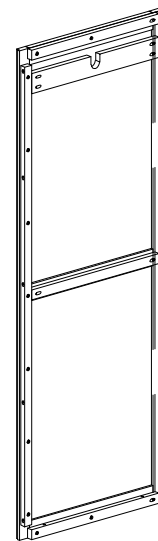


Bx1- LEFT SIDE

The dowel hole location on the right side only

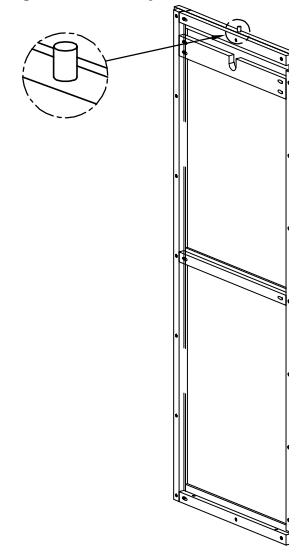


Cx1 - RIGHT SIDE

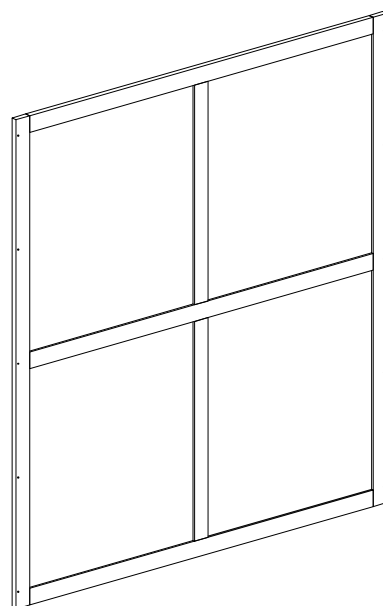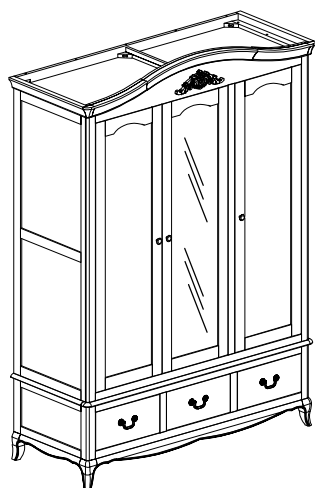


Dx1- BACK FRAME

Fix Connecting Bracket from Back
See from back

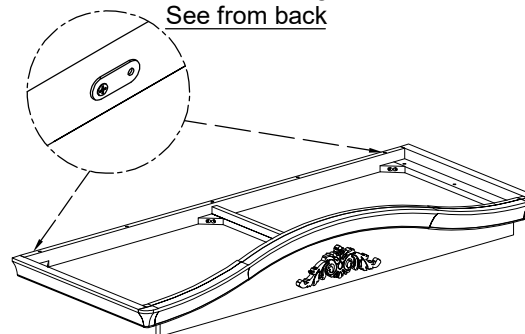



Ex1 - TOP FRAME

Fx1 - HANGING RAIL

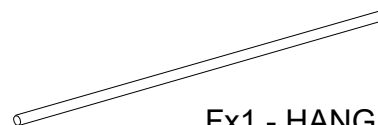



Hx1 - SUPORT HANGING

Fix Connecting Bracket from Back
See from back

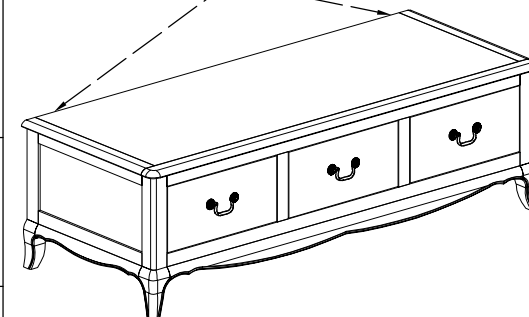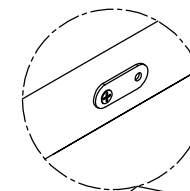


Gx1 - BASE

STEP 1

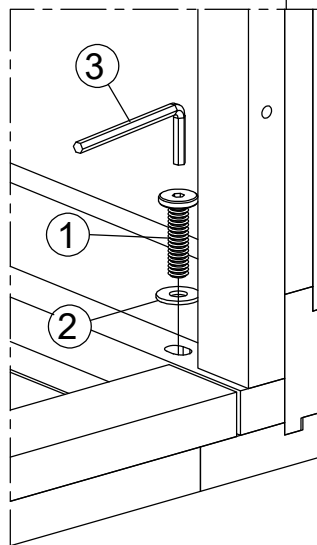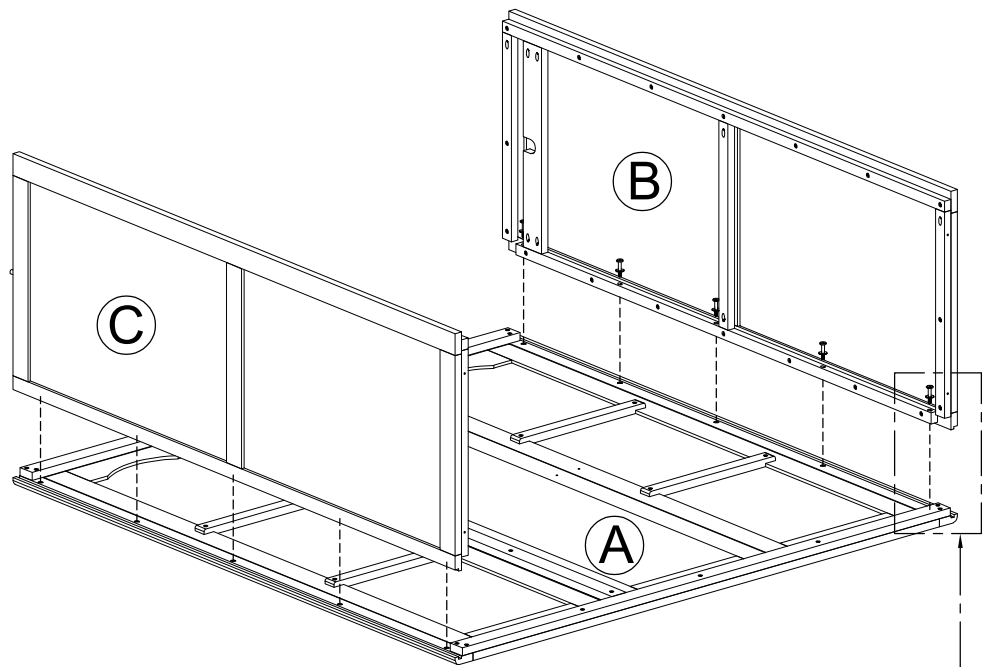


STEP 2

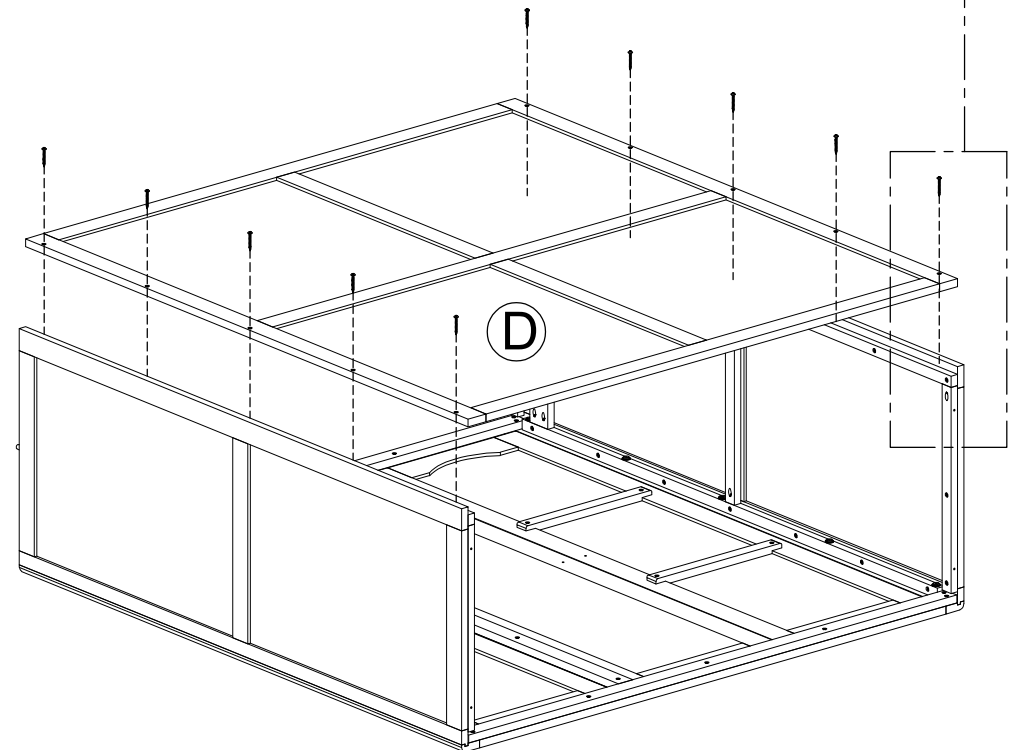


4

STEP 3

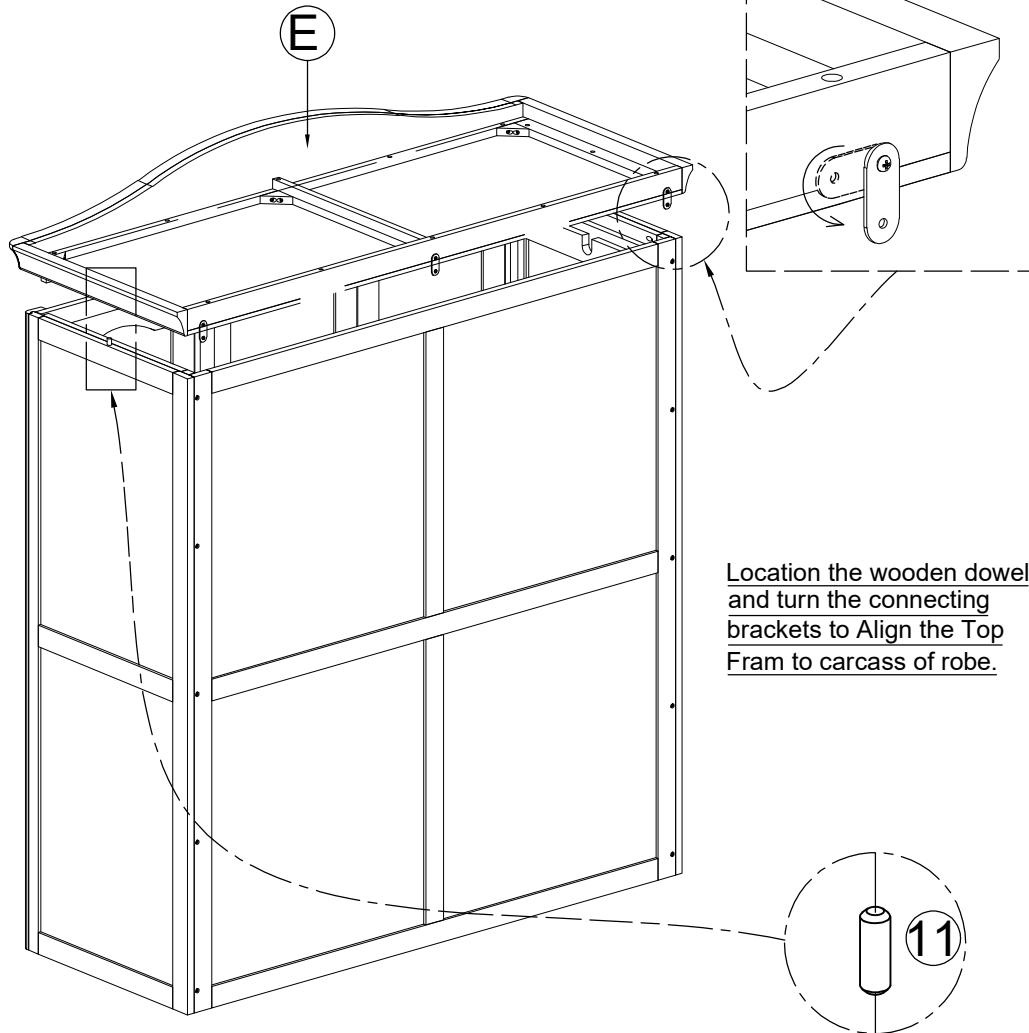


STEP 4

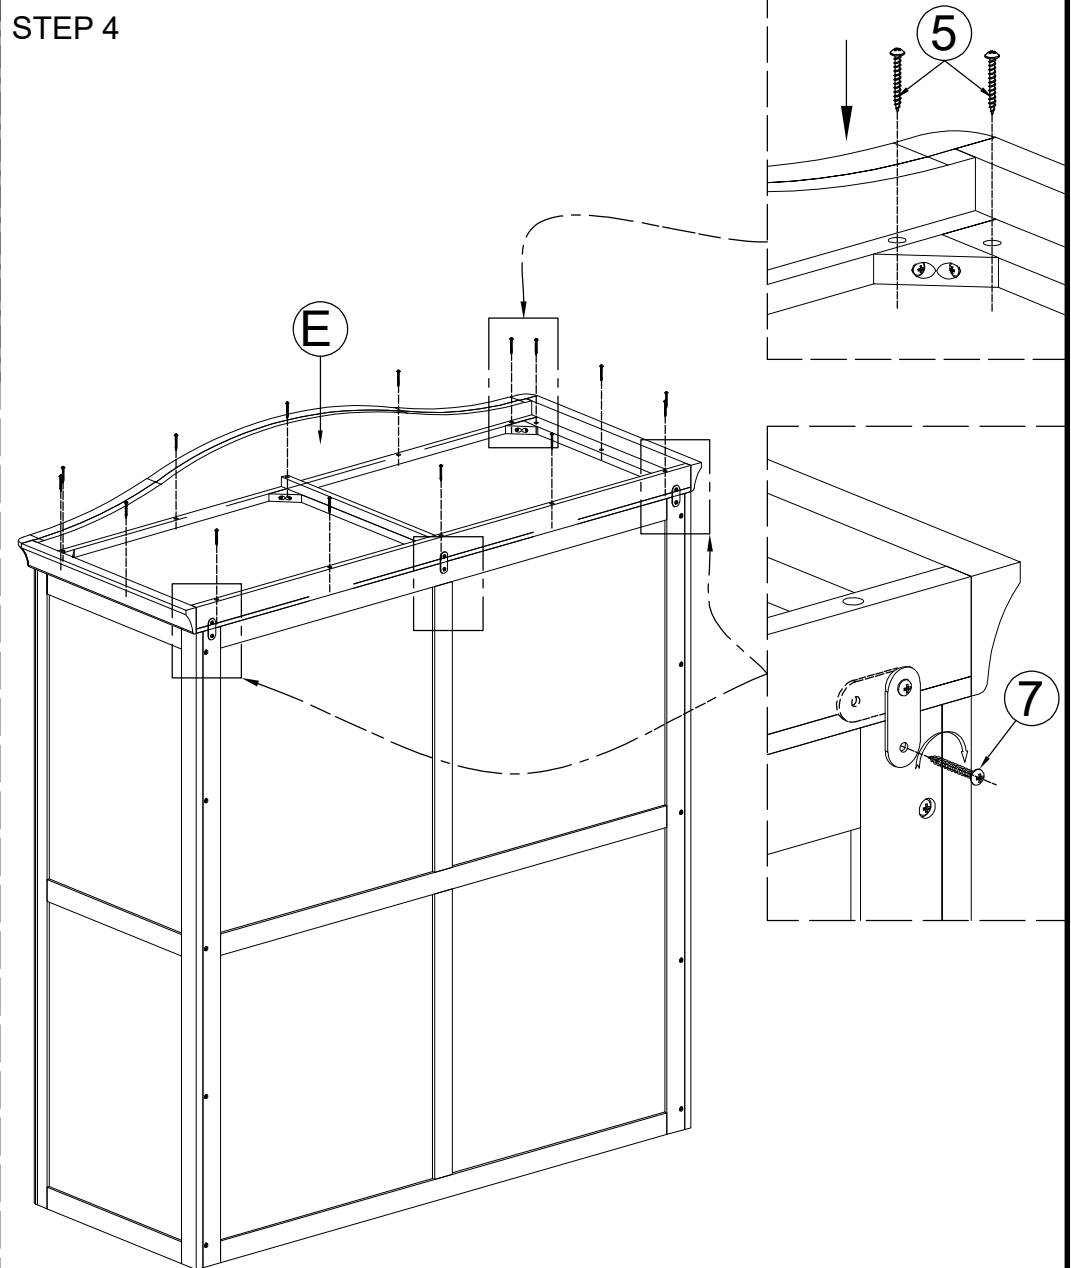


STEP 5





Fix screws from horizontal rail to front - Curver rail in Front frame

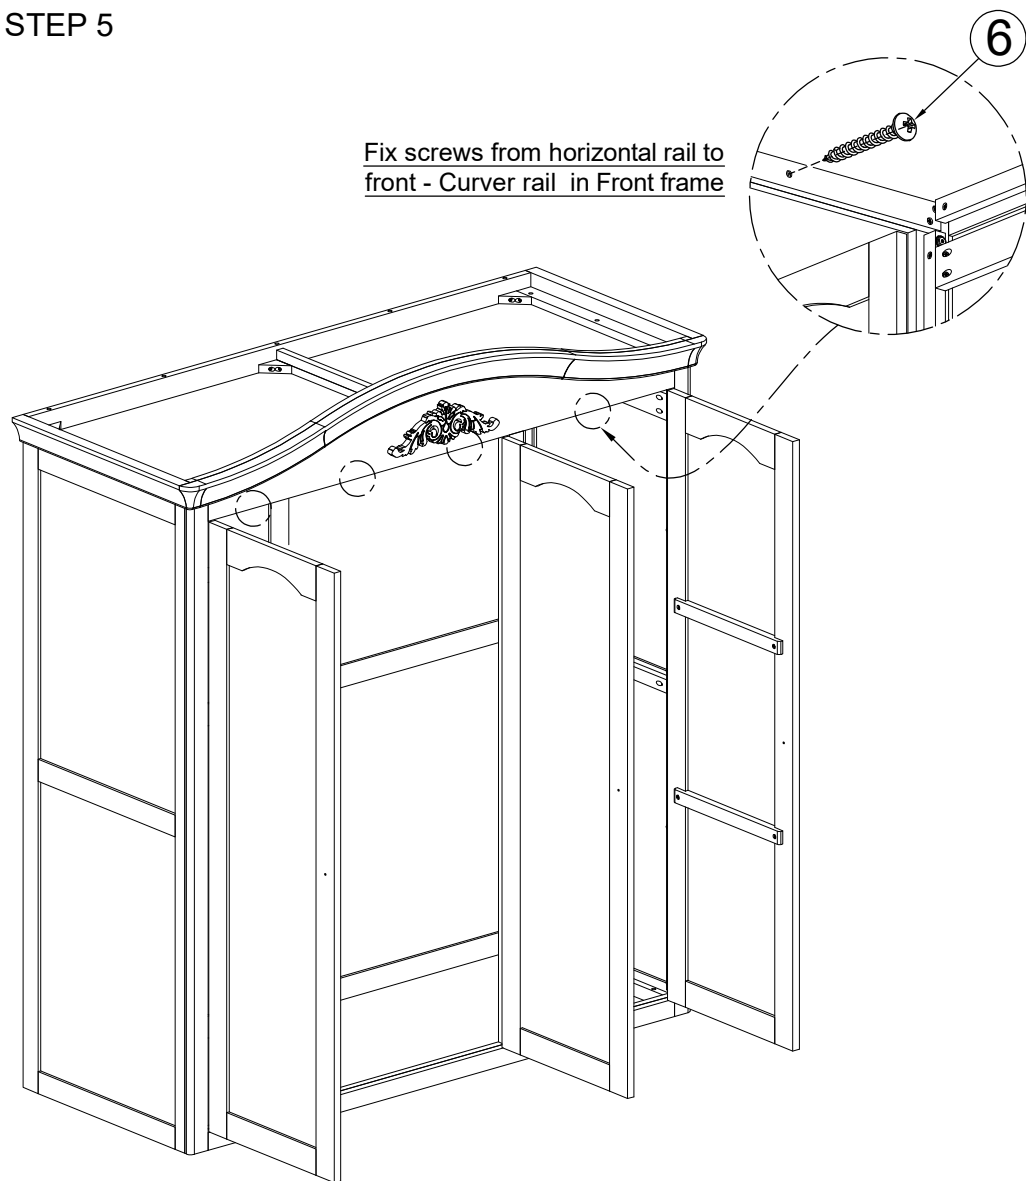


STEP 6

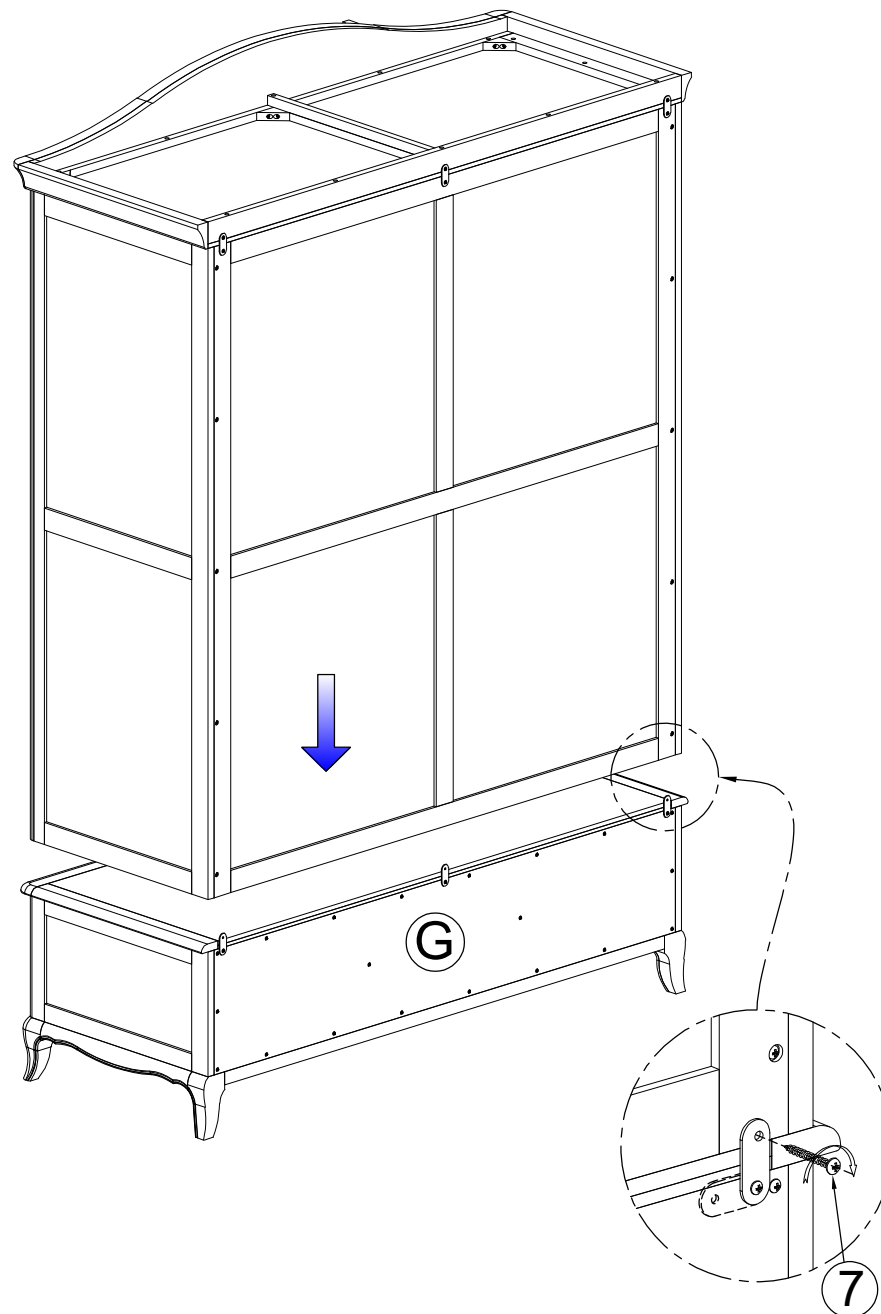

STEP?

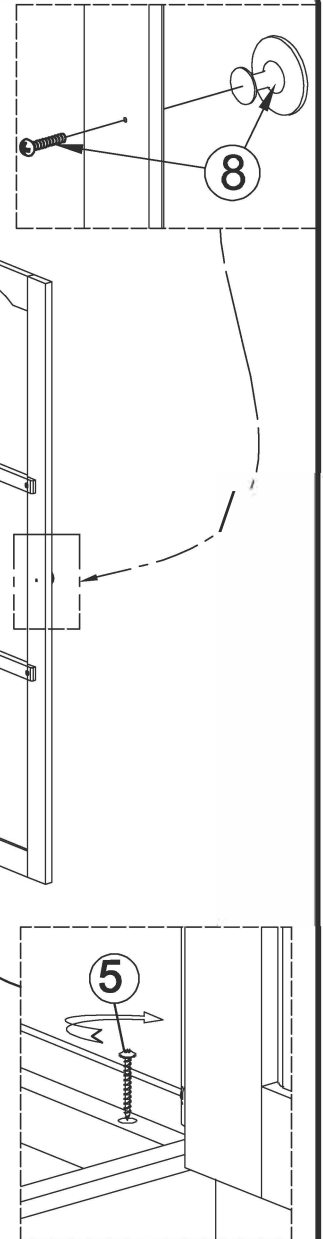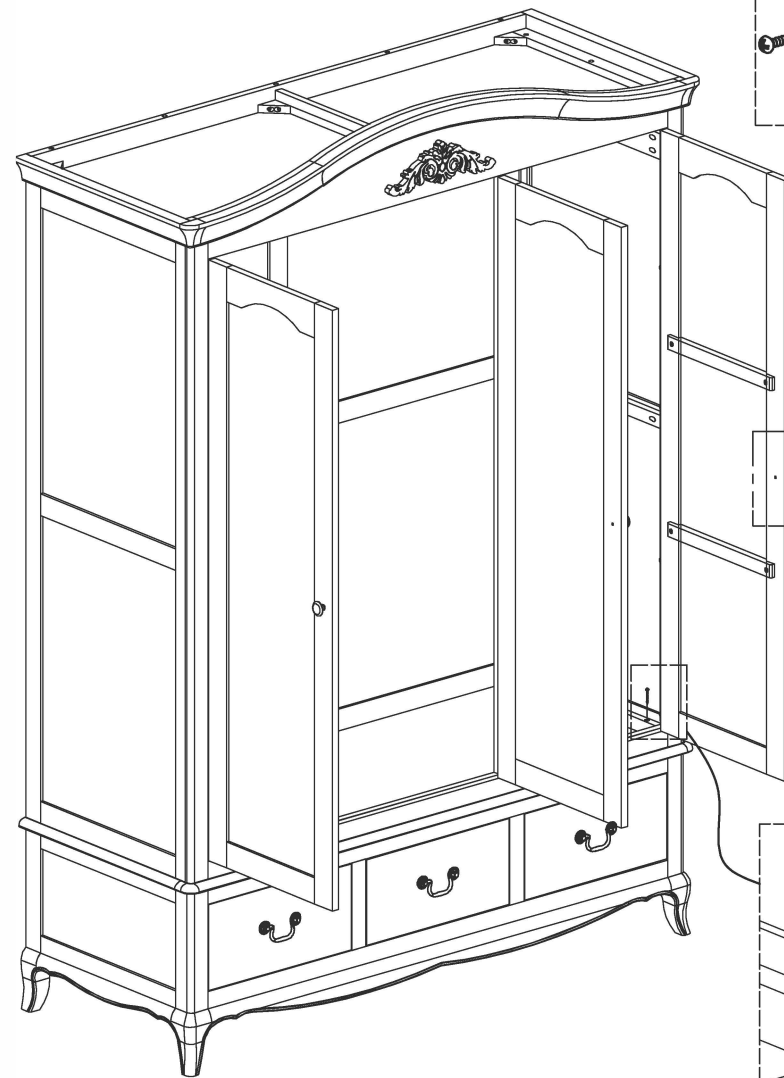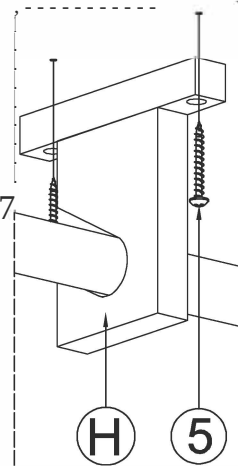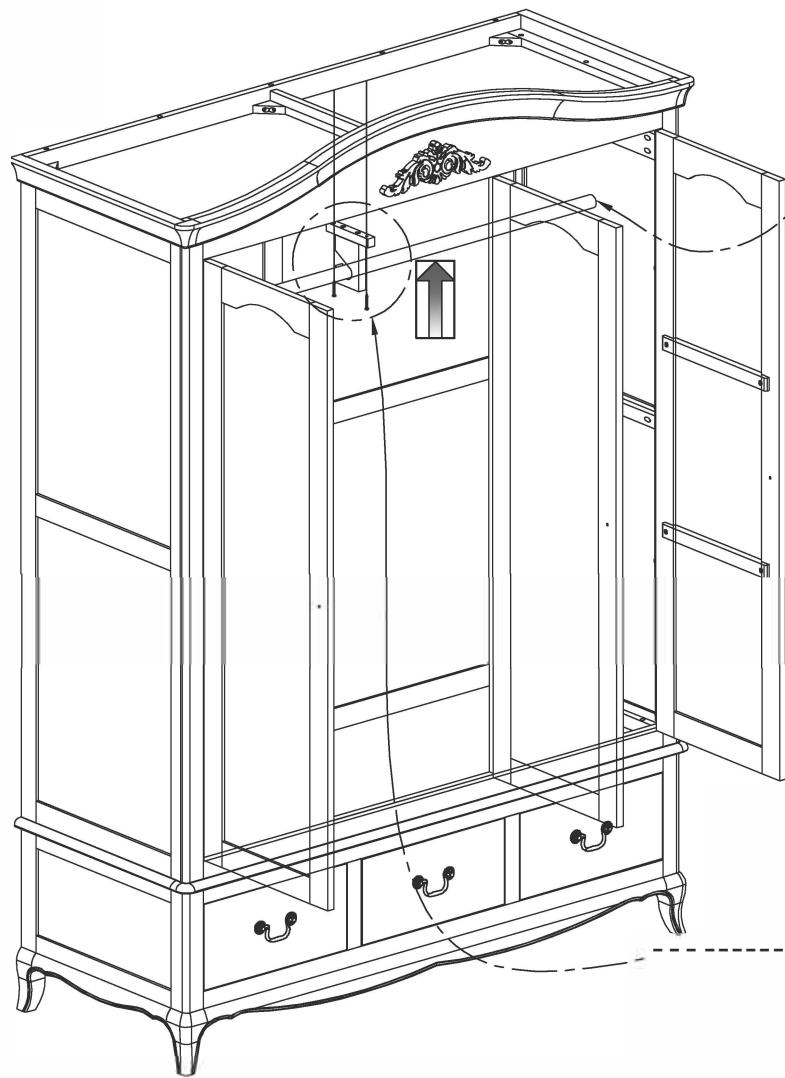

STEP 8

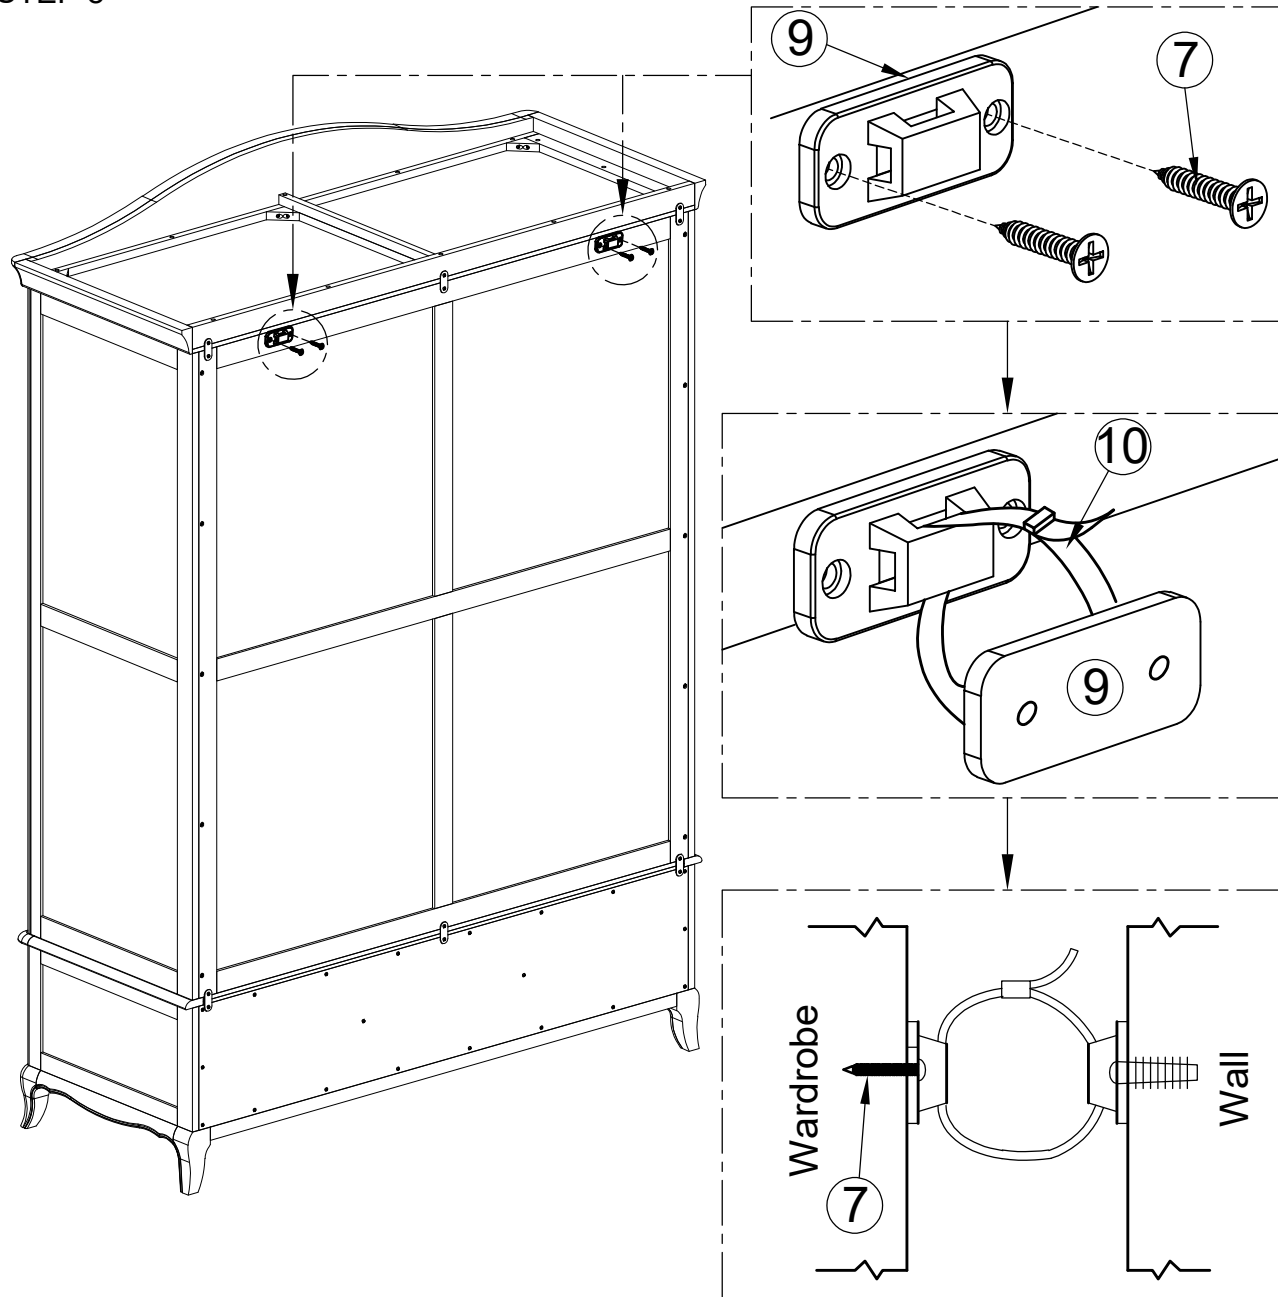

FINAL

