




Product Assembly : 3 Door 2 Drawer Wardrobe with Center Mirror

FBO - WD03PKLR / FMT

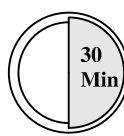


This assembly requires two people.




A : Door Frame x 01




B : Side Frame x 02

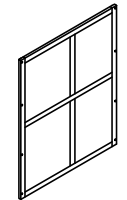


C : Back Frame x 01

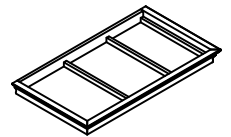

D : Top Frame x 01







E : Hanging Rail x 01

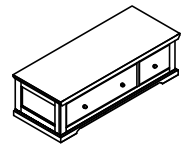


F : The base x 01



G : The base x 01

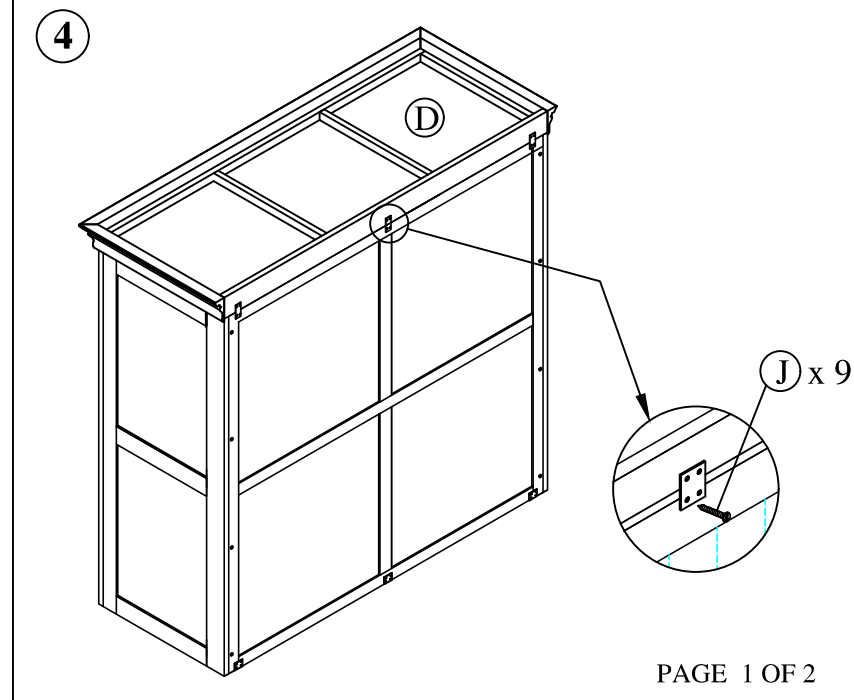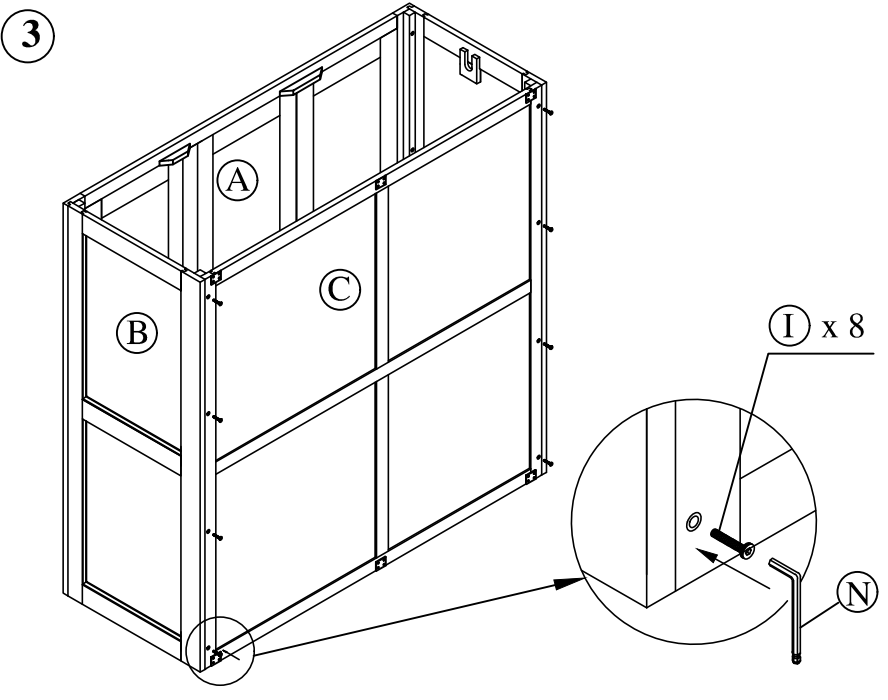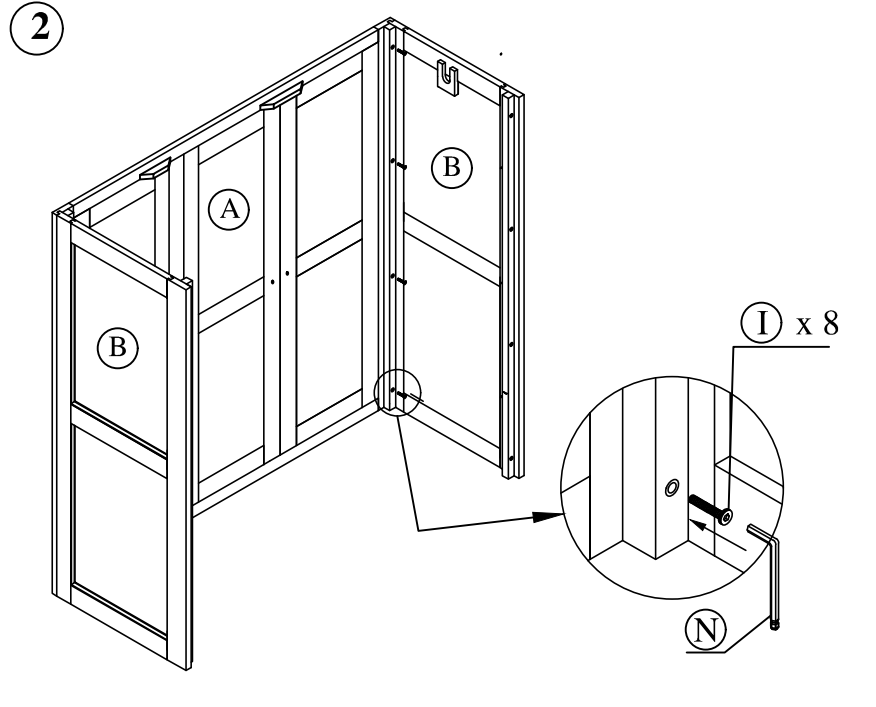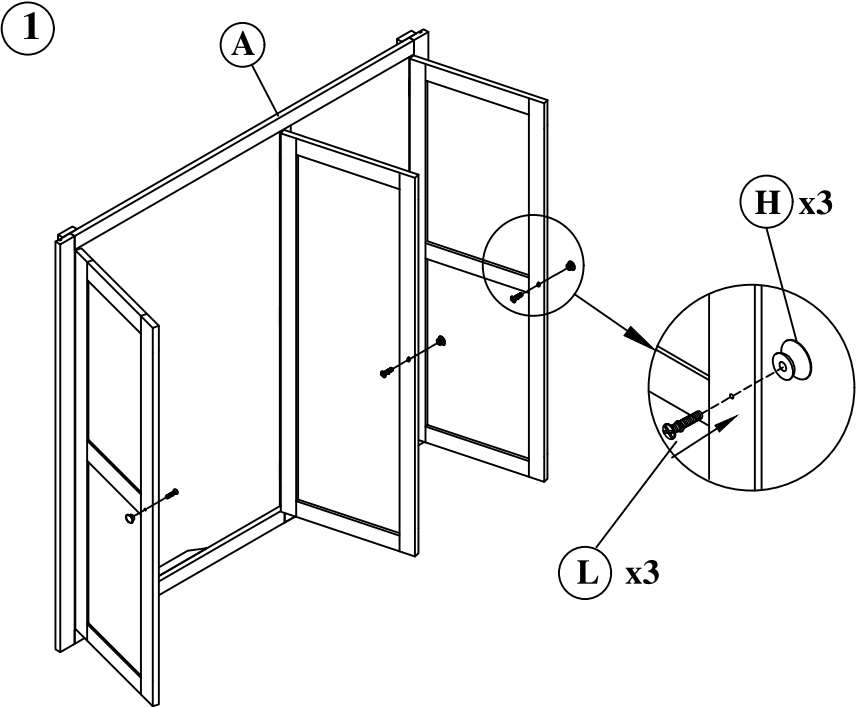


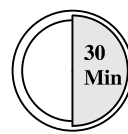


This assembly requires two people.



H : Handle x 03



I : Bolt 30 mm x 16



J : Screws 15mm x 30




K : Screws 12mm x 04



L : Screws 30 mm & washer x 03




M : Metal Corner x 06

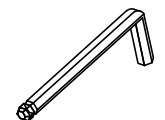


N : Allen Keys x 02


5

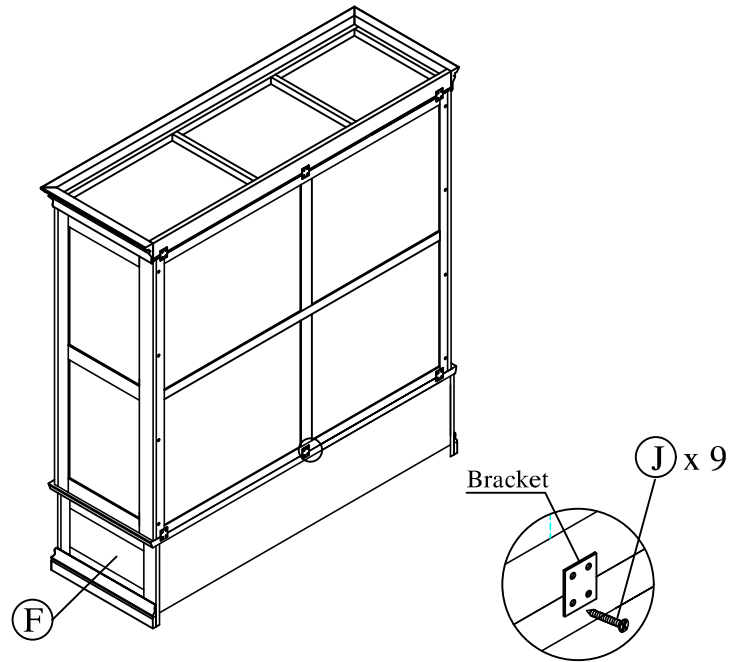

6

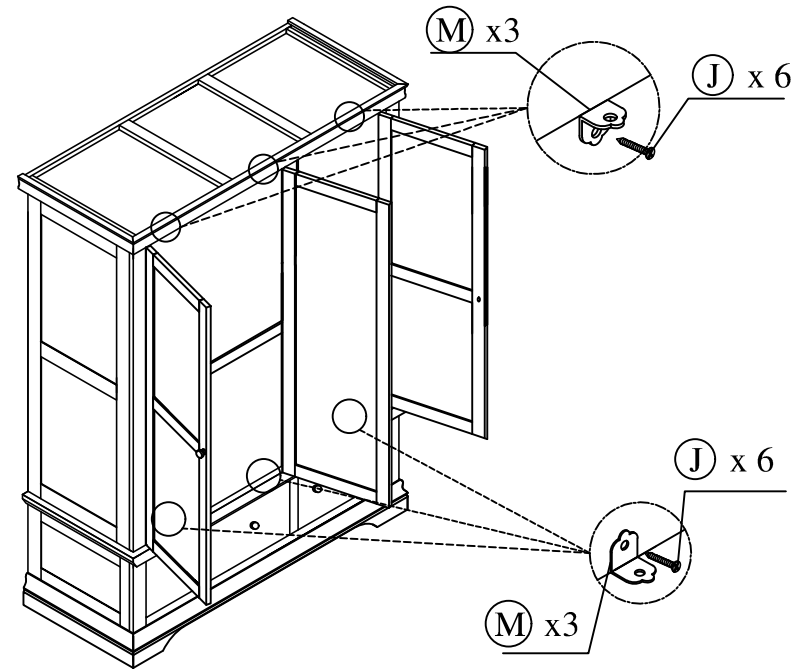

7

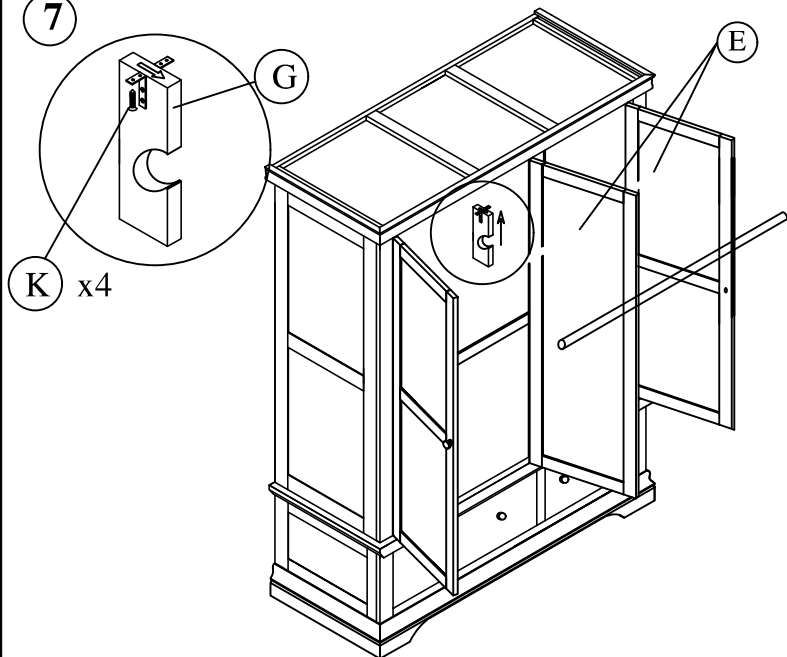

8

